


# HIVE



♥ OF SAUNA

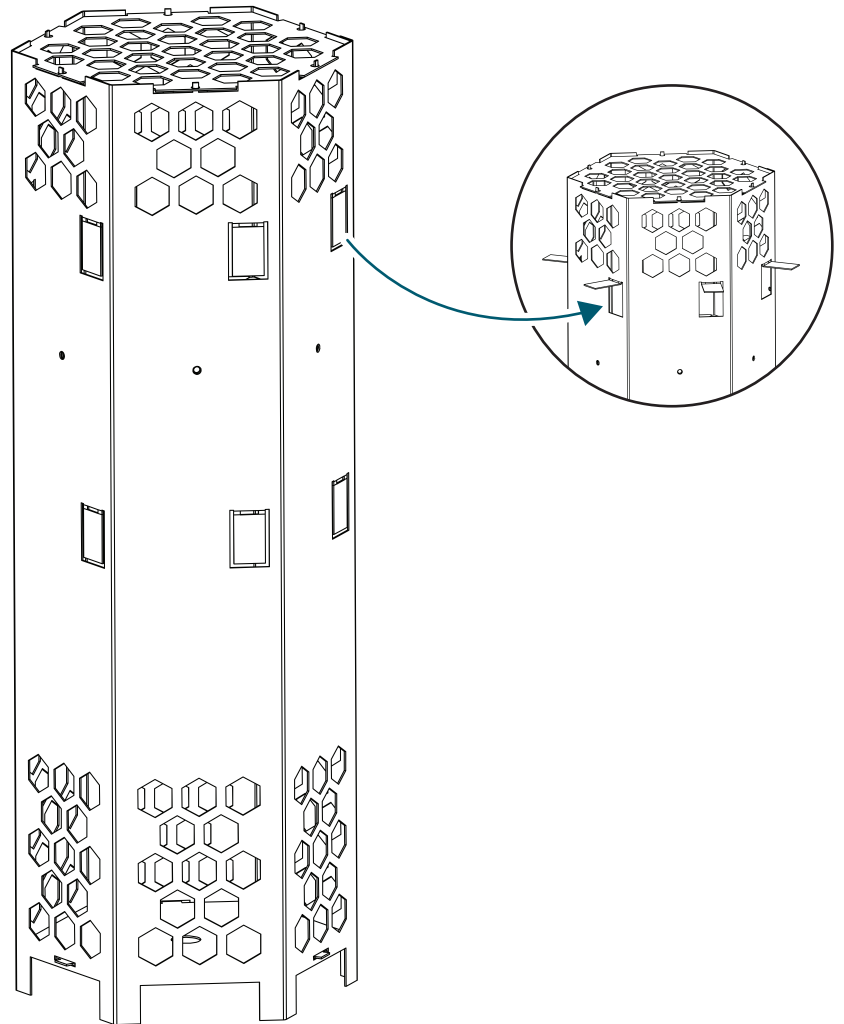

Made in Estonia, EU

info@huum.eu  
huum.eu  
#huumsauna

HUUM OÜ  
Vahi tee 9  
60534, Tartumaa  
Estonia

## EE Õhutunnel

- Paigalda õhutunnel kerise küttekehade vahele.
- Eemalda õhutunneli kaas.
- Lao tunneli põhja kaks kihti (ca 10 cm) kerisekive.
- Painuta metallist fiksaatorid 90-kraadise nurga alla nii, et need hoiaksid küttekehasid kokku puutumast.
- Pane kaas tagasi peale.
- Õhutunnel pikendab küttekehade eluiga ja kiirendab kütmisprotsessi.

Leia ajakohaseim materjal meie kodulehelt [huum.ee](http://huum.ee)

## EN Air tunnel

- Install an air tunnel between the heating elements of the heater.
- Remove the air tunnel cover.
- Place two layers (approx. 10 cm) of heating stones at the bottom of the tunnel.
- Bend the metal clips to a 90-degree angle to keep the heating elements from touching each other.
- Put the lid back on.
- The air tunnel extends the life of the heating elements and speeds up the heating process.

Find the latest updates on our website [www.huum.eu](http://www.huum.eu)